

The Ray Allen Company Inc.

2525-8 Pioneer Avenue, Vista, CA 92081 USA Phone 760 599 4720 FAX 760 599 4383

www.rayallencompany.com



RP3 LED TYPE POSITION INDICATOR

The RP3 LED type position indicator uses ten LED lights to show you the position of the servo output shaft. Although we have used some of the brightest LED lights available, direct sunlight will still affect your ability to see the active light. Because of this, the position indicator should be mounted somewhere in the shade on your panel, preferably just under the sun shield.

For night flight, the bright LEDs can be dimmed. This dimming function is activated when the white wire is connected to 12V+ ONLY. Note that this dimming function is either ON or OFF, it is not designed to be connected to a panel light rheostat. The dimming function is OPTIONAL and does not have to be used (just cut off the white wire).

CAUTION!!


DO NOT use the RP3 LED type indicator with an alternator, rectifier or a battery charger without a battery in line.
DO NOT connect the orange wire to 12V+.
DO NOT install any other indicator in line with the RP3.

INSTALLING THE LED TYPE POSITION INDICATOR

Use the dimensions shown below to cut the mounting hole for the indicator. The RP3 LED indicator is mounted with the two 2-56 countersunk screws, nuts, and washers provided.

Wires as small as 26 gage may be used, or Ray Allen has color coded 5 wire cable available for connecting to the servo. Wiring connectors are not included. Use any type desired or simply solder all connections and insulate with heat shrinkable sleeving. A separate 1/2 amp fuse or circuit breaker is recommended. The self-adhesive label (if used) should not be applied to the indicator face until you are sure the indicator will not be removed again. It is possible to reverse the orange and blue wires to reverse the LED's travel.

Try to keep all radio com antennae co-ax cables a minimum of 3" away from the RP3 wire harness to reduce LED flicker during radio transmission. We further suggest wiring it on the avionics buss side of your aircraft's electrical system to isolate the indicator from engine start/shut down voltage spikes.

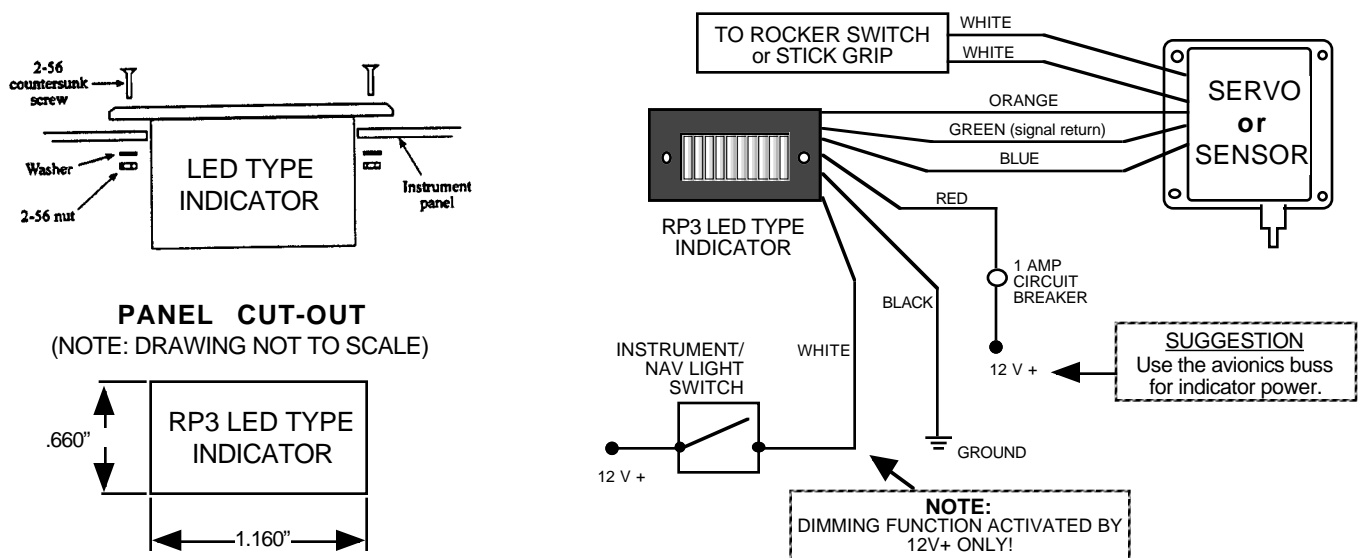

Warning: Installation and use of Ray Allen Company products is the responsibility of the aircraft designer and builder. Use of Ray Allen products in any application which will exceed their capability can cause failure leading to injury or death.